



Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion, within the one-year warranty period. Proof of purchase, with the date of purchase as well as photos of the defective merchandise, must be provided.

If you have any questions, comments or concerns please feel free to contact us by phone at: **888-881-4668**. You may also contact us by email: customerservice@serenityhealth.com, or via our webpage at: www.serenityhealth.com/contact-us/

USER GUIDE

Read this guide carefully before use and keep it handy for future reference, use the lamp with the utilization precautions; failure to do so will void warranty. Dealer disclaims any responsibility for the incorrect use of the product or the transformer with another product which would be defective, dangerous or inappropriate.

Light

1. Do not expose lamp to fire or high temperature.
2. Do not attempt to dismount lamp assembly or alter the water-proofing of this product as this may result in electrical shock; failure to comply will automatically void warranty.
3. Do not try to charge the lamp with chargers other than the one supplied by the manufacturer.
4. Although impact resistant, avoid submerging in water and bright sunshine over extended period of time.
5. To extend battery lifespan, ensure that the first charge is at least 8 hours.
6. Product is not intended for children without adult supervision.

Charger

1. Do not use near a heat source or expose to fire.
2. Keep out of reach of children.
3. Do not touch the charger while charging.
4. Do not try to open charger, faulty chargers should be returned to dealer.
5. Disconnect the charger after charging is complete.
6. Do not use outdoors as charger is not water proof.



Instructions

1. Remove the yellow charger seal to plug in DC input for charging. To maximize battery lifespan, fully charge the first time.
2. After charging is complete, cover the DC input with the charger seal and ensure it is securely fastened to prevent water seepage.
3. To turn on, press the RED button. Light will start at the last mode which was previously selected. Pressing the red button will change the RGBW colors, flash mode, and speed.
4. To turn off, hold RED button down for a few seconds.



Functions

- Power ON= Red; Power OFF= Black
- Brightness Control (in static mode)
- Speed Control- Flash, Strobe, Fade, Smooth mode
- Color Selection- 16 static colors
- Flash Mode- Flashes 7 colors continuously
- Strobe Mode- Blinking from white
- Fade Mode- 7 colors that fade into each other
- Smooth Mode- Flow of full color spectrum



Notes

1. For first time use, flick the switch on the bottom to activate the functions.
2. If storing for a long period of time, recharge battery first, then hold the switch on the bottom for 12 seconds to reset the device to the factory settings. Recharging the battery at least once a month is recommended to prolong the life of the battery.